














Doro 326i US

Time/date














Setting the time and date

1. Press  The phone book numbers will be displayed.
2. Press  again. The ring signals will be displayed.
3. Press and hold  for approx. 2 seconds.
4. Press  and enter time (HH:MM).
5. Press  to save.
6. Scroll am/pm using /.
7. Press  to save.
8. Scroll to the date using /.
9. Press  and enter the date (MM/DD/YYYY).
10. Press  to save.
11. Press  to end.

Doro 326i US

Fecha/hora

Configuración de la fecha y la hora

1. Pulse  para que aparezcan los números de la guía.
2. Vuelva a pulsar  y aparecerán las señales de llamada.
3. Mantenga pulsada la tecla  durante dos segundos aproximadamente.
4. Pulse  y introducir la hora (HH:MM).
5. Pulse  para guardarla.
6. Desplácese hasta am/pm con  / .
7. Pulse  para guardarla.
8. Desplácese hasta la fecha con  / .
9. Pulse  e introduzca la fecha(MM/DD/AAAA).
10. Pulse  para guardarla.
11. Pulse  para finalizar.