




Lift cover **A** on handle to access magazine.

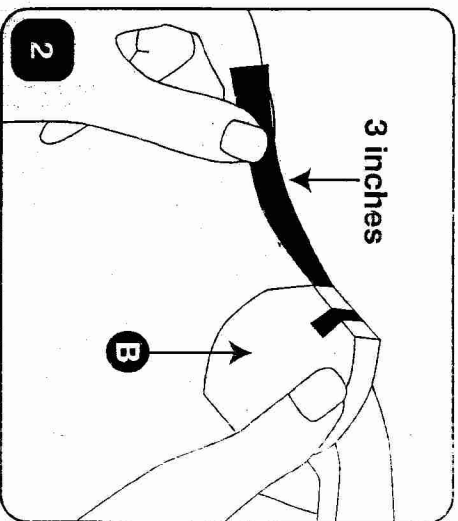


Pull out approx. 3 inches (70mm) of label tape from roll **B**.

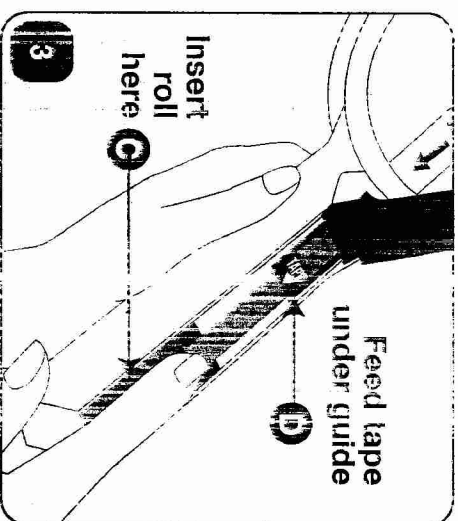


Load cartridge or roll into labeler **C**. Insert end under "TAPE" guide **D**.

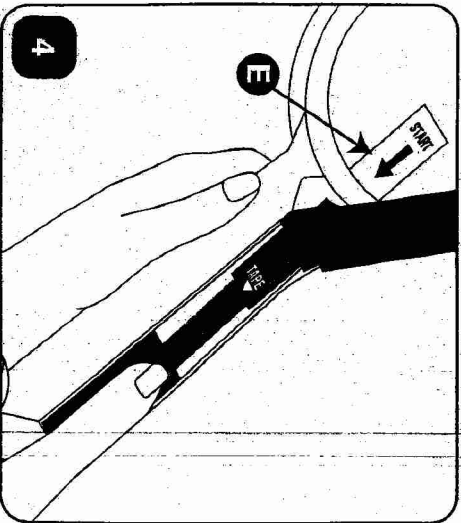


Feed tape end by hand through guide up to "START" line **E**. Close magazine cover. Labeler is ready to print.

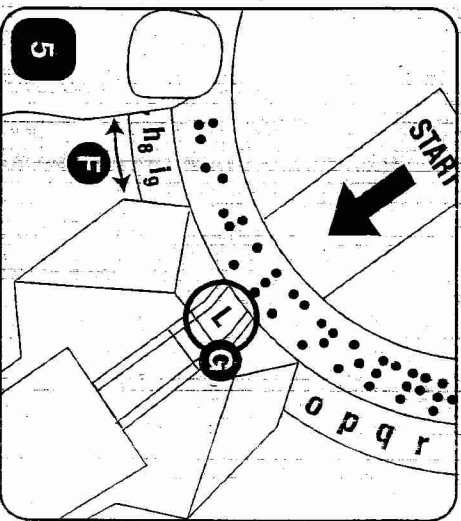


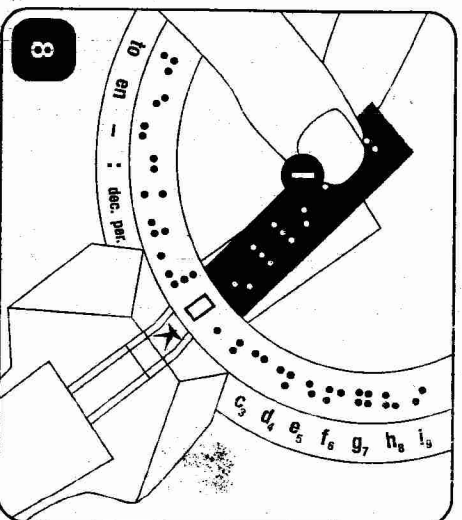
Select letter/number/symbol by rotating dial **F** until selection appears in opening **G**.

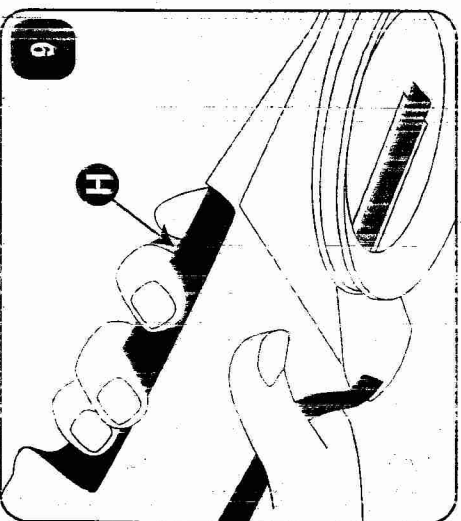


To print: Squeeze trigger **H** firmly and release. For blank spaces and tape advance, squeeze trigger lightly until click is heard, and release.

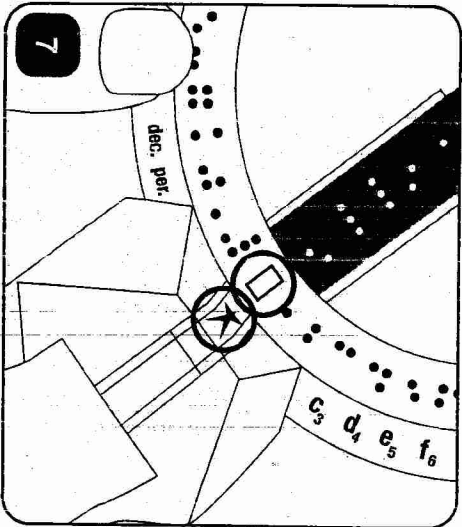

To cut: Turn dial to cut symbol, ★  squeeze handle firmly and release.



Advance printed tape three spaces by clicking lightly three times. Pull cut tape to remove **1**. Tape is ready to print next label.

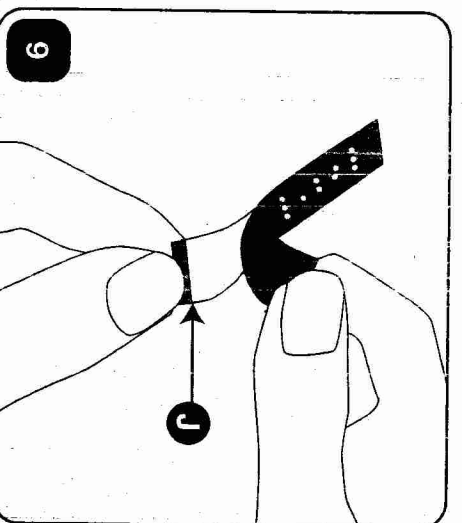


The perforated tab **J** makes it easy to separate label from liner.

Operating Tips:

If a letter appears where a blank space was intended, handle was squeezed too firmly.

If the rest of the tape is pulled out when a printed label is removed, handle was not squeezed firmly enough to cut tape completely.

If letters are not printed clearly, handle was not squeezed firmly enough. To remove a printed label near the end of the tape roll, it may be necessary to remove the dial and take out the remaining tape. (See "Removing Dial") Don't operate handle too many times in "cut" ★  position. This could cause transport problems.

Attaching the Label:

Tape sticks to almost all surfaces which are dry, free of dust, grease and oil and reasonably smooth. Don't bend sharply or fold tape. After attaching the label, smooth on by using hands only to avoid damage to the letters.

Removing Dial:

Remove tape completely from labeler. Hold labeler as shown and use both thumbs to push dial forward. Lift dial to remove.

